


OWNER'S MANUAL —

Please read before using this equipment.

43-2208

Thank you for purchasing a RadioShack Multi-Phone Telephone Recorder. You can use your Multi-Phone Telephone Recorder controller to record your phone conversations with any tape recorder (not supplied) that has a microphone and remote jack. Plug the controller into any modular phone jack in your home or office. Your controller has a built-in phone jack so you can connect an extension phone to it. ⚠

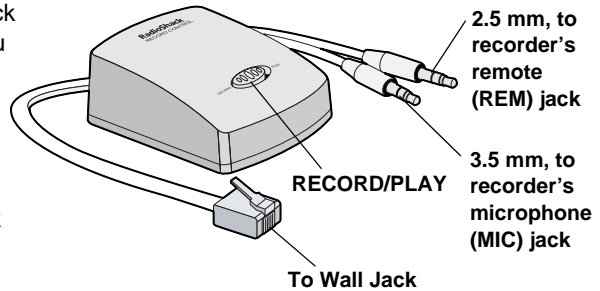

⚠ WARNING ⚠

It is illegal in some states to record a conversation without consent of all parties to the conversation, including the phone company.

📝 NOTE 📝

- If you use the controller with a tape recorder that uses an ALC switch (such as Cat. No. 14-1123), set the switch to IN. Otherwise, the record input level might change with the input level.
- To listen to a recording, press the recorder's STOP button, set **RECORD/PLAY** to **PLAY**, rewind the tape in the recorder, then press the recorder's PLAY button. When you finish listening, set **RECORD/PLAY** on the controller to **RECORD**.

INSTALLATION

1. Plug the controller's phone plug into a modular wall jack. Or, unplug your phone from the wall jack and plug it into the phone jack on the back of the controller. Then plug the controller's phone plug into the wall jack.
2. Insert the small (2.5 mm) plug on the controller's Y-cable into your recorder's remote (REM) jack and the large (3.5 mm) plug into your recorder's microphone (MIC) jack.

OPERATION

Set **RECORD/PLAY** to **RECORD**, then set your recorder to record. The recorder starts to record when you pick up the handset of any phone on the same line. It stops automatically after you hang up. 📝

CARE

Keep the controller dry; if it gets wet, wipe it dry immediately. Use and store the controller only in normal temperature environments. Handle the controller carefully; do not drop it. Keep the controller away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your controller is not performing as it should, take it to your local RadioShack store for assistance. Modifying or

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

! — Important

📝 — Note



NOTE

You must not connect your controller to:

- coin-operated systems
- party-line systems
- most electronic key telephone systems

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

tampering with the controller's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

FCC STATEMENT

Your controller complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the bottom of your controller. ☑

We have designed your controller to conform to federal regulations, and you can connect it to most telephone lines. However, each recorder (and each device, such as a telephone or answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN on the bottom of your controller.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

The USOC jack for this equipment is RJ11C. Also, the telephone cord and modular plug provided are Part 68 compliant for connecting to a network.

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

Lightning

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.